

# Aroga

## DAISY Player Comparison Chart

	Plectalk PTN 2	Victor Reader ClassicX Plus
<b>CD Loading</b>	Slot loaded	Slot
<b>Playable media</b>	12 cm diameter, Stamped CD, CD-R, CD-RW	Standard CD, CD-R, or CD-RW
<b>SD card slot</b>	SD/SDHC card (maximum storage size: 32GB)	No
<b>Playable audio formats</b>	MP3, WAV, AMR-MB+, DAISY ADPCM2, OGG, WMA unprotected	MP3, MPEG2, Wave GSM610, Wave ADPCM, OGG Vorbis
<b>DAISY Formats Supported</b>	DAISY 2.02, ANSI/NISO Z39.86/DAISY 3.0, NLS, Bookshare, RFB&D	DAISY 2, 2.02 and DAISY NISO Z39.86
<b>Sound Output</b>	Headphone (Stereo), Built in speaker (Monaural)	Headphone, Line-out, or Built-in Speaker
<b>Externally connected terminal</b>	USB 2.0 (Type A)	Analog Remote Jack for Physically Handicapped
<b>Electric Power Source</b>	AC Adaptor, AC 100V to 240V, 50 or 60 Hz	AC Adaptor, AC 100 V to 240 V, 50 or 60 Hz
<b>Dimensions (W/L/H)</b>	170 mm x 219 mm x 56 mm (6.69 in x 8.62 in x 2.2 in)	23.7 cm x 20.9 cm x 5.4 cm (9.3 in x 8.2 in x 2.1 in)
<b>Weight</b>	2.87 lbs (1.3 kg)	1.1 kg (2.42 lbs)
<b>Accessories</b>	Mask Cover AC Adaptor User's Guide CD Quick Reference Guide Safety Instructions	AC Adaptor User's Guide CD Quick Reference Guide
<b>Headphones (line output)</b>	Compatible impedance 32 ohm unbalanced	3 external jacks: headphone, line-out, remote control for physically disabled
<b>Built-in Speaker</b>	Output impedance 4 ohm Output 2.0W	Impedance: 4 ohms, Power 2W/4W Max
<b>Number of keys</b>	27 keys without mask, 9 keys with mask	23

	Plectalk PTN 2	Victor Reader ClassicX Plus
<b>Guide Voice</b>	Gives spoken information about the current operation Provides key description in Key Describer mode Speaks menu items Gives help information (press the Information key)	Human recorded messages for all player operations, Menu items, Key Describer, 'Where am I' key and Book/Player key
<b>Search Function</b>	DAISY book: Heading, Group, Page, Phrase, Bookmark Audio: Album, Track, Bookmark Text file: Level, Paragraph, Sentence, Word, Character, Bookmark	DAISY book: Heading, Group, Page, Phrase, Time Jump, Bookmark Audio: Album, Track, Time Jump, Bookmark
<b>Volume Adjustment Steps</b>	0 to 25 (in increments of 1)	1 to 15 (in increments of 1)
<b>Guide volume adjustment steps</b>	-5 to +5 (in increments of 1)	n/a - uses Auto Gain Control
<b>Play speed adjustment</b>	11 settings from -2, through 0, to +8 (in increments of 1). Normal speed is at 0. -2 is 0.5 times speed, +4 is double speed, +8 triple speed	13 steps in increments of 1, from -3 (0.5 normal speed) to 0 (normal) to +10 (3 times normal speed)
<b>Tone adjustment steps</b>	13 settings from -6, through 0, to +6 (in increments of 1) Normal tone is at 0	15 steps from -7, through 0, to +7 (in increments of 1) Normal tone is at 0
<b>Memory function</b>	Bookmarks, maximum is 10,000	Simple and Highlights Bookmarks, from 1600 to 6500 depending on number of books. If memory filled, memory from least recently played book/file is reused.
<b>Type of battery</b>	Ni-MH	Ni-MH
<b>Dimensions</b>	Length 53.64 mm Width 56.68 mm Height 29.00 mm	Length 98mm Width 44mm Height 15mm
<b>Weight</b>	2.87 lbs (1.3 kg)	1.1 kg (2.42 lbs)
<b>Capacity</b>	1,800 mAh	1,800 mAh
<b>Charging Time</b>	4 hours approximately	4 hours approximately
<b>Operating Time</b>	DAISY formats, CD playing, 5 hours Music CD (CD-DA) format, CD playing, 2 hours DAISY format, SD card playing, 8 hours	DAISY format CD 10 hours, Music CD (CD-DA) format 5 hours
<b>Number of keys</b>	2 years	1 year